



CONNECTED HOME


WiFi Video Doorbell
MANUAL
for Doorbell version 2.6



For iPhone

Table Of Contents

Diagram & features	3
Accessories & system requirements	4
Inserting the battery	5
How to install your WiFi Video Doorbell to an existing hard wired doorbell system.....	6-7
Powering your WiFi Video Doorbell without an existing hard wired doorbell system	8
Pairing the WiFi Video Doorbell to your mobile device.....	9-10
Connecting the WiFi Video Doorbell using a hard wired network cable.....	11
Pairing the Indoor Wireless Chime and WiFi Video Doorbell.....	12
Xtreme Connected Doorbell app walkthrough.....	13-16

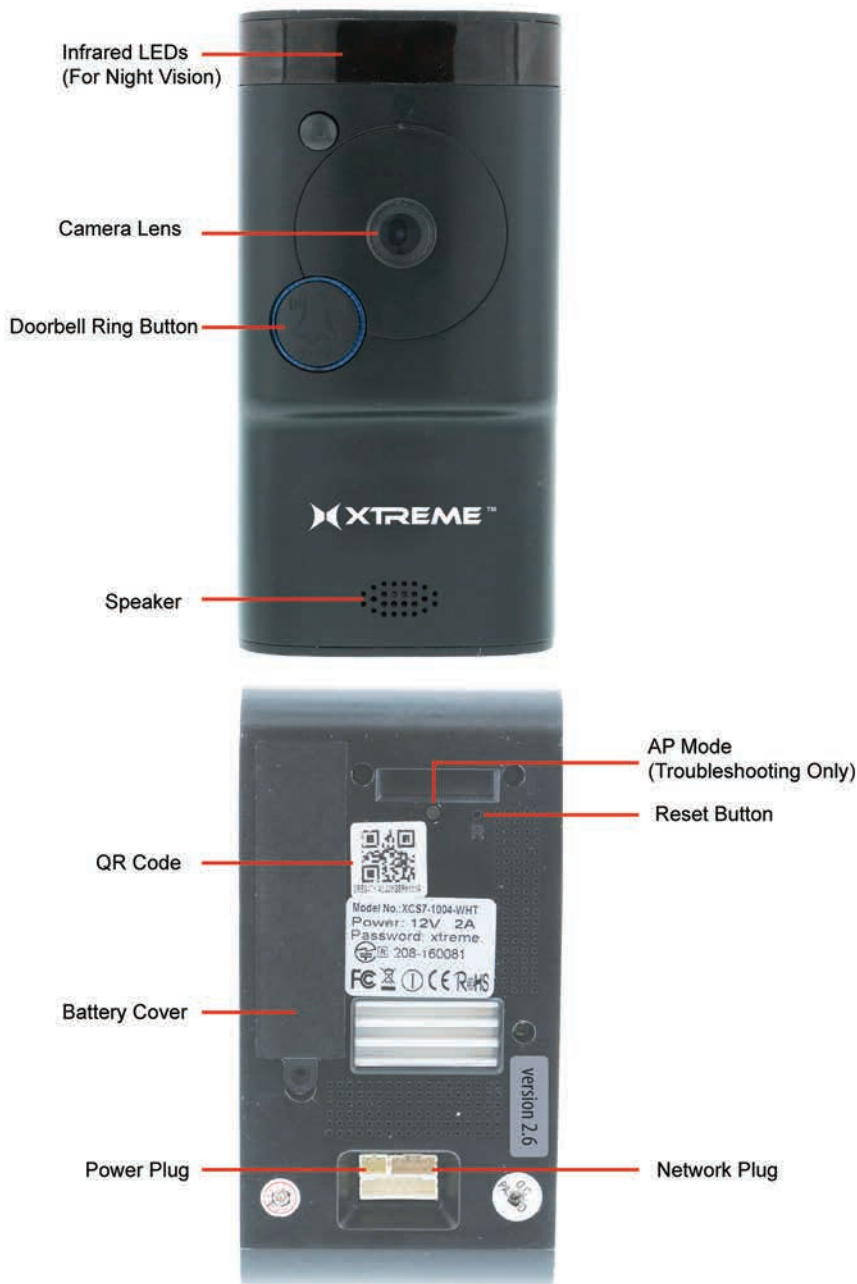

Requirements:

iPhone running iOS 8 or higher

2.4ghz WiFi network (for instructions about 2.4ghz networks, please see www.xtremeconnected.com/wifisetup)

Screwdriver (1/8" phillips head)

Included Accessories:



A: Mounting back plate



B: AC Adapter



C: Battery



E: Power connector w/ exposed wires



D: Network connector



G: Indoor wireless chime
(3 AAA batteries not included)



F: Wire clip



I: Power connector for AC adapter



H: Mounting anchors and screws

Inserting the Battery (C)

Before setting up your WiFi Video Doorbell, you will need to install the battery (C). The battery is located in the packaging underneath the Wireless Indoor Chime (G)

1. Open the back panel on the WiFi Video Doorbell
2. Insert the battery with the pointed tip (+) of the battery faced down.
(See image below)
3. The WiFi Video Doorbell will now begin to power up and enter pairing mode. You can now continue the wiring setup process. You do not need to pair it to your app immediately. Once it is fully set up, you can hold-press the reset button on the back of the WiFi Video Doorbell to enter it back into pairing mode

Remove
back cover



Reset Button



Included battery may not contain sufficient charge to operate the doorbell prior to installation. Once installed, battery needs to fully charge before using doorbell (approx. 2 hours)

Regardless of which method you choose to install your WiFi Video Doorbell, this rechargeable battery will maintain its charge after it has been completely installed.

The WiFi Video Doorbell requires connection to a power source.

See page 6 for setup with an existing hard wired doorbell


See page 8 for setup without an existing hard wired doorbell

How to install your WiFi Video Doorbell to an existing hard wired doorbell system


See our instructional installation video at www.xtremecommunicated.com/wi-fi-video-doorbell-tutorial


If you don't have an existing hard wired doorbell system, please use provided power connector (I) and AC adapter (B) to power your doorbell, see page 8 for details.

1. Turn off the power from the fuse box that powers your existing doorbell
2. Take off your old doorbell, there should be two wires connected to it
3. Pull the two wires coming from your wall through the square hole on the bottom of the mounting back-plate (A)
4. Screw the back-plate (A) onto the wall using the provided anchors and screws (H)
5. Take the provided cable with exposed wires (E) and plug in the connector side to the back of the WiFi Video Doorbell (*pre-connected*)


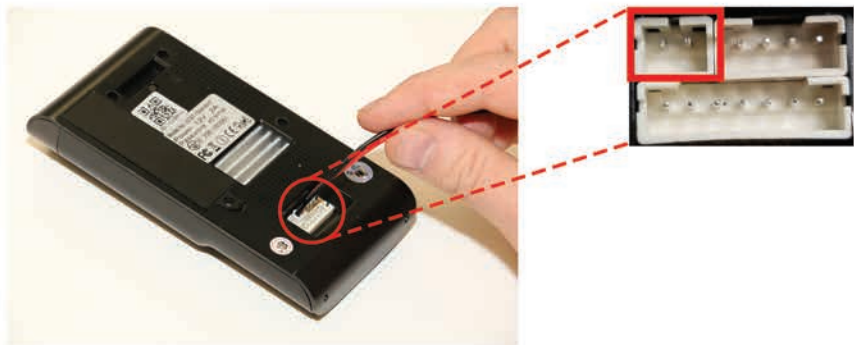


6. Using the provided clips (F), press down on one end and insert the wires that are coming from the WiFi Video Doorbell to one side of the clip (*as shown below*)

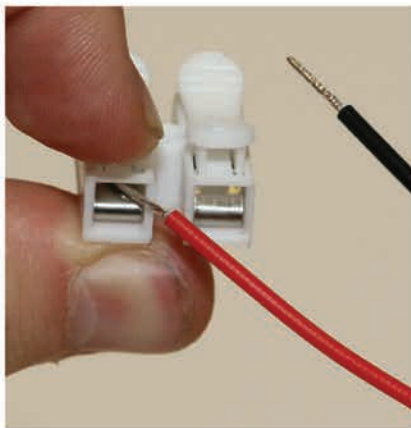

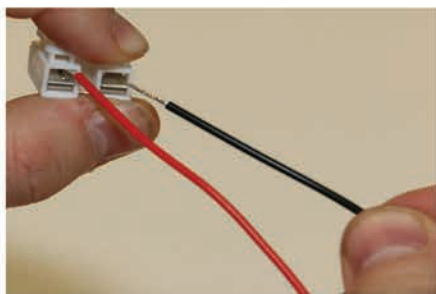


7. Connect the wires coming from your door to the opposite side of the clip; the colors **DO NOT** have to correspond

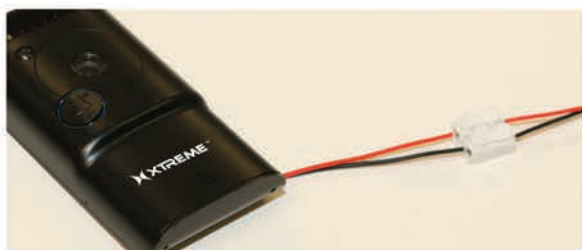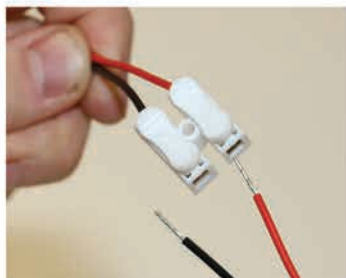

8. Turn the power on at your fuse box that powers your existing doorbell your WiFi Video Doorbell will now power up
9. When you lightly press the WiFi Video Doorbell it will ring the chime inside your home (as well as the Indoor Wireless Chime; after it has been installed, see page 11) and when you hard press the WiFi Video Doorbell button, it will ring the WiFi Video Doorbell itself as well as the other chime(s)

Powering your doorbell WITHOUT an existing hard wired doorbell system

1. Plug in the power connector (I) to the WiFi Video Doorbell

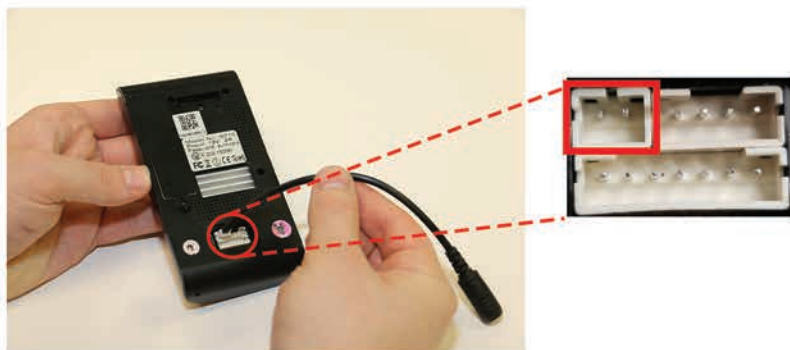

2. Plug AC adapter (B) into an electrical outlet



3. Plug AC adapter cord (B) into the power connector socket (I)



4. Your WiFi Video Doorbell will now power up

Pair the WiFi Video Doorbell to your mobile device

Connect using WiFi

1. Download and install the Xtreme Connected Doorbell app from the App Store
2. Open the app and click "Sign up". Follow the on screen instructions to set up your account
3. Make sure the WiFi Video Doorbell is powered
 - a. Either you have powered your WiFi Video Doorbell with an existing hard wired doorbell (see page 6)
 - b. Or you have powered with an AC adapter (see page 8)
4. You will hear a notification from the WiFi Video Doorbell saying "Welcome to Smarthome!"
 - a. This means the WiFi Video Doorbell is ready to be set up
 - b. If you do not hear this message, using a paper clip, please press and hold the reset button on the back of the WiFi Video Doorbell for 10 seconds to restore it to factory settings. This will enable set up mode (see image below)
5. Setup the WiFi Video Doorbell
 - a. Open the "Xtreme Connected Doorbell" app and log in
 - b. Press the "+" to add a new WiFi Video Doorbell
 - i. Choose "Set up without network cable" (the second option)
 - ii. The app will now guide you through a few simple steps to setup your WiFi Video Doorbell (See next page)
6. After completing the pairing process, make sure to snap your WiFi Video Doorbell onto the mounted back-plate (A) and secure it on the bottom using the included screws (H)



Press the + to begin the set up process



You haven't added a Doorbell
Please add one first.



Select the second option to set up
your WiFi Video Doorbell to your WiFi



Model: Recommended

Cable Connection


Model: Need a 2.4GHz Wi-Fi

Wireless Connection

Model:

WiFi Connection

Make sure your smartphone is connected
to the same WiFi network you want
to put your WiFi Video Doorbell

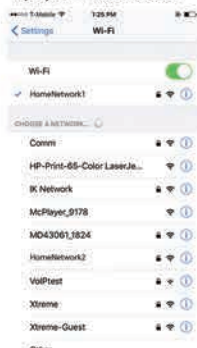

Scan the QR code
on the back of the
WiFi Video Doorbell



Scan the QR code on the back of the Doorbell



Model No.: 3CS7

Next

Input your WiFi network password



WiFi: HomeNetwork1

Password: 12345678901234567890

The doorbell will connect to the Wi-Fi automatically
after clicking "Next".

Next

The App will now configure your
WiFi Video Doorbell to the network



Setting up the Doorbell on your
Wi-Fi. Please wait...

Choose to either use the default
password or create your own
Note: The default password is "xtreme"



 
Congratulations! Set up successfully.

To ensure your doorbell is secure,
Please set up a password for the doorbell first.

Yes, I will default password

No, Change password first

Note: We are assuming you have a strong enough WiFi signal at the door post where you are installing the WiFi Video Doorbell. The best way to check if you have a strong enough WiFi signal is to simply look at the top of your screen where the WiFi signal strength icon is located. If you do not have a strong enough WiFi signal, there are 2 options;



- a. Install using a hard wired network cable (see instructions below)
- b. Purchase and install either a WiFi extender or access point from your local electronics retailer. Make sure to install the WiFi extender or access point in close proximity to where your WiFi Video Doorbell will be installed

Connect using a hard wired network cable

1. Download and install the Xtreme Connected Doorbell app from the App Store
2. Open the app and click "Sign up". Follow the on screen instructions to set up your account
3. Make sure the WiFi Video Doorbell is powered
 - a. Either you have powered your WiFi Video Doorbell with an existing hard wired doorbell (see page 6)
 - b. Or you have powered with an AC adapter (see page 8)
4. Plug the network adapter into the WiFi Video Doorbell (see image below)
5. Measure the distance you require between where the WiFi Video Doorbell will be installed and your router, then purchase an ethernet cable of appropriate length from your local electronics retailer. Then, plug the ethernet cable from an available port on your router and connect it to the Network Connector (D).
- a. Note: Make sure this is also wired through the square hole on the bottom of the back-plate (A)
6. You will hear a notification from the WiFi Video Doorbell saying "Welcome to Smarthome!"
 - a. This means the WiFi Video Doorbell is ready to be set up
 - b. If you do not hear this message, using a paper clip, please press and hold the reset button on the back of the WiFi Video Doorbell for 10 seconds to restore it to factory settings. This will enable set up mode.



Plug Network connector (D) here


7. Setup the WiFi Video Doorbell

- a. Open the "Xtreme Connected Doorbell" app and log in
 - b. Press "add a new doorbell"
 - i. Choose "Set up with Network cable" (the first option)
 - ii. The app will now guide you through a few simple steps to setup your WiFi Video Doorbell
 1. Scan the QR code on the back of the WiFi Video Doorbell
 2. A pop up will appear asking you to give the WiFi Video Doorbell a name and to input the default password (see screenshot above)
 - a. Note: The default password is "xtreme"
 3. The app will now configure WiFi Video Doorbell to your network
8. After completing the pairing process, make sure to snap your WiFi Video Doorbell onto the mounted back-plate (A) and secure it on the bottom using the included screws (H)



How to pair the Indoor Wireless Chime (G) to your WiFi Video Doorbell

1. You may need a second person to complete this procedure
2. Make sure that your WiFi Video Doorbell is plugged in and powered on
3. Insert 3 AAA batteries (not included) into the Indoor Wireless Chime (G) and hold it close to your WiFi Video Doorbell
4. Press the volume button on the Indoor Wireless Chime and the ring button on the WiFi Video Doorbell (as shown below) at the same time, for 5 seconds
5. Your WiFi Video Doorbell and Indoor Wireless Chime should now be paired. Whenever the WiFi Video Doorbell ring button is pressed, the Indoor Wireless Chime will ring as well!
6. If the Indoor Wireless Chime does not ring, repeat the above steps and make sure you are pressing both buttons simultaneously

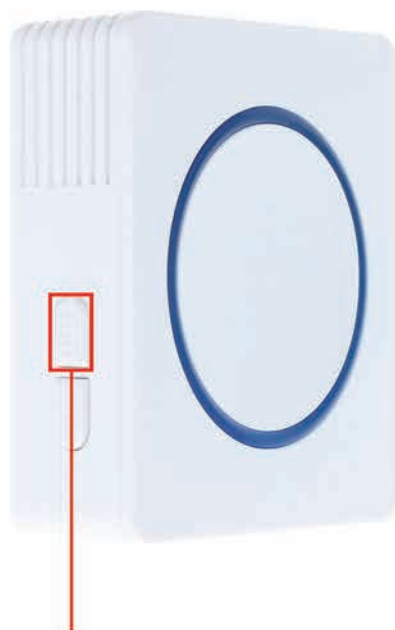


Volume button



Doorbell ring button

App walkthrough

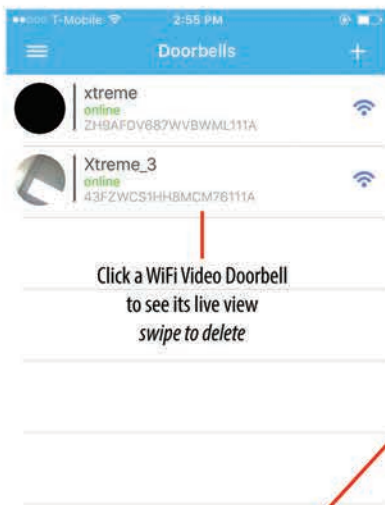

Click a WiFi Video Doorbell
to see its live view
swipe to delete



Click the WiFi Video Doorbell
you wish to view the saved files of

WiFi Video Doorbell(s)
on your account

Manually taken pictures
and video are shown here



Add a new WiFi
Video Doorbell here

Automatically triggered
recordings are shown here

 


Click the WiFi Video Doorbell
you wish to view the saved files of



Click a recording to
download and view it





WiFi Video Doorbell Settings
(see next page)



LAN 41.8 kb/s

Auto 720p

online



 Click this to turn on or off
the ability to hear what is going
on at the WiFi Video Doorbell

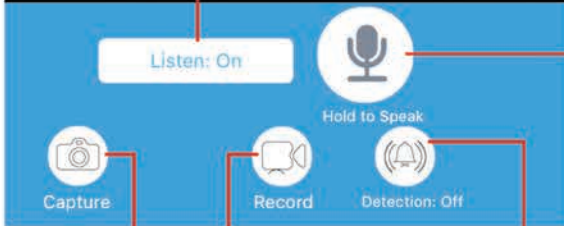

Hold this button to speak
through the WiFi Video Doorbell

Manually trigger a snapshot

Manually trigger a video recording


Turn on automatic notifications
and recording
(See page 15 for settings about
motion triggering recordings)

Change the name of your WiFi Video Doorbell (Ex. House Front Door)

Change the password of your WiFi Video Doorbell

Change the WiFi network your WiFi Video Doorbell is connected to

It is recommended these settings be left at default

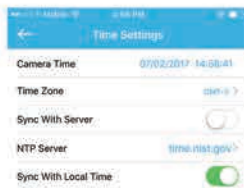

Change the time settings of your WiFi Video Doorbell. It is recommended to turn on "Sync with local time"

Set how long your WiFi Video Doorbell rings for

Set a specified time to full time record (Ex. Between 3pm and 4:30 when the kids come home)

(Cont. on pg14)